

Accessories

ITEM DESCRIPTION

BOSCH T101A JIG SAW BLADE 5PK
BOSCH T101AO JIG SAW BLADE 5PK
BOSCH T101B JIG SAW BLADE 5PK
BOSCH T101B100 JIG SAW BLADE 100PK
BOSCH T101BR JIG SAW BLADE 5PK
BOSCH T101D JIG SAW BLADE 5PK
BOSCH T101D JIG SAW BLADE 100PK
BOSCH T118A JIG SAW BLADE 5PK
BOSCH T118AF JIG SAW BLADE 5PK
BOSCH T118B JIG SAW BLADE 5PK
BOSCH T119BO JIG SAW BLADE 5PK
BOSCH T244D JIG SAW BLADE 5PK
BOSCH T244D JIG SAW BLADE 100 PC PKG
BOSCH T301CD JIG SAW BLADE 5PK
BOSCH T318B JIG SAW BLADE
BOSCH T345XF JIG SAW BLADE 5PK BI-METAL PROGRESSOR UNIVERSAL BLADE

BOSCH SBSA1050 DUST BAG FOR 4 X24 BELT SANDERS
--

BOSCH SR5R125 5 DISC 120GR 50 BOX

BOSCH 1/4 COLLET CHUCK ASSY

BOSCH T15005 5MM RH BIT
BOSCH T15008 8MM RH BIT
BOSCH T15018 8MM LH BIT
BOSCH T15035 35MM RH BIT
BOSCH T15040 40MM RH BIT

BOSCH 85266 LAMINATE TRIM BIT 1/2
BOSCH 85267 LAMINATE TRIM BIT 1/2
BOSCH 85268 LAMINATE TRIM BIT 3/8
BOSCH 85269 LAMINATE TRIM BIT 3/8

BOSCH 85285-B100 FLUSH TRIM BIT BULK
BOSCH 85286-B100 BEVEL TRIM BIT BULK

3/16

ITEM DESCRIPTION

BOSCH 85213 STRAIGHT ROUTER BIT 1/8 2 FLT S C
BOSCH 85221M STRAIGHT ROUTER BIT 1/4 2 FLT C T
BOSCH 85227 STRAIGHT ROUTER BIT 1/2 2 FLT C T
BOSCH 85230 STRAIGHT ROUTER BIT 5/8 2 FLT C T
85241M STRAIGHT BIT 3/8 W/2 FLUTES 1/2 SHANK
BOSCH 85242M STRAIGHT ROUTER BIT 1/2 2 FLT 1/2 SHANK C T
BOSCH 85251M STRAIGHT ROUTER BIT 1/2 2 FLT C T
BOSCH 85265M STRAIGHT ROUTER BIT 3/4 2 FLT C

BOSCH 85290M ROUNDOVER BIT 1/8 RAD
BOSCH 85294M ROUNDOVER BIT 1/4 RAD

BOSCH 85216 LAMITE TRIM ROUTER BIT 1/2 3 FLT W/B B C T
--

BOSCH 85217 OVERHANG CUT-OFF BIT

BOSCH 85218M RABBING ROUTER BIT 3/8

BOSCH 85219 V GROOVING ROUTER BIT 3/8 C T

BOSCH 85420 LAMINATE TRIMMER ASSY

BOSCH 85659M 19i BEVEL UNDERMOUNT BOWL BIT SOLID SURFACE
--

BOSCH 85430 FLUSH TRIM ASSY C T
BOSCH 85431M BEVEL TRIM ASSEMBLY 1/4 SHK 10 DEG BEVEL C T
BOSCH 85441M TRIM BIT 1/2 1/2 SHANK

PRACTICAL KAISER SPLINES 0 1M/CTN WOOD SPLINES
PRACTICAL KAISER SPLINES 20 1M/CTN WOOD SPLINES

